

## Your Kit Includes:



EarthBox® Container



Aeration Screen




2 - B/W  
Mulch Covers




Fill Tube



6 - Casters



Bottom Shelf

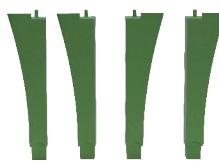

4 - Legs



2 - Outrigger Feet



1 lb.  
Dolomite




1 lb. - Fertilizer  
(Standard 7-7-7  
OR Natural 8-3-5)

## Optional 5 ft. Staking System:

See Step 5



2 - 29½" Crimped-End Aluminum Tubes



3 - 26½" Aluminum Tubes



2 - T-Connectors



Trellis  
Net




2 - Rim Clamps  
w/ Hardware

## GETTING STARTED:

Before you begin, make sure all components are handy. No tools are required for assembly.

1


### Attach Casters (Optional)

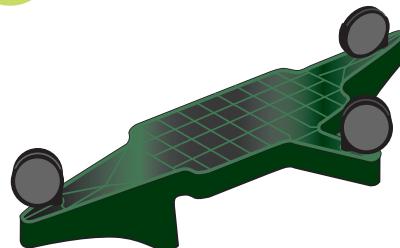

If mobility is desired, turn outriggers upside-down and insert 6 EarthBox® Casters into the sockets (3 on each outrigger). EarthBox® Casters are custom sized, and the use of other casters may cause damage to EarthBox® products. If you don't have EarthBox® Casters, or do not want the system to be mobilized, skip this step and proceed to Step 2.

2

### Lay Black Shelf on Outriggers

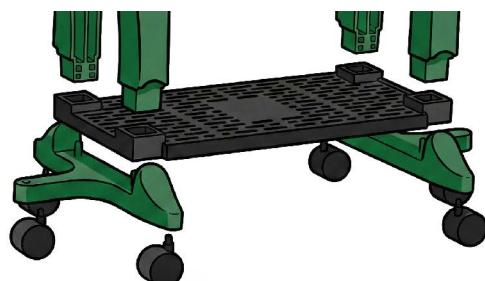

3

### Insert (4) Legs in Shelf Corners

Legs are labeled Left and Right as seen below.



4

### Set Empty EarthBox Securely on Legs



If you purchased the optional 5 ft. Staking System, proceed to Step 5.


Otherwise, refer to the EarthBox® Original Instruction Manual (included) to complete set up of the system.

Note: You can add the Staking System onto the system at any time. We recommend doing so before your plants grow too big to avoid difficulty guiding stems through the trellis net.


## STAKING SYSTEM

Add our optional trellis to provide necessary support to vining and climbing crops, such as tomatoes, peppers, cucumbers, and more.

### 5 Attach Rim Clamps

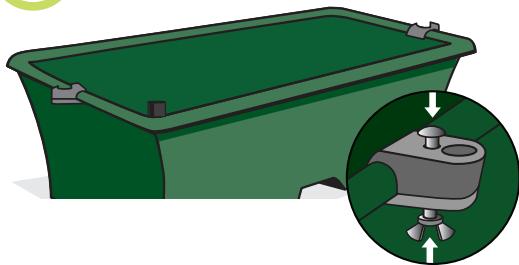

### 6 Insert Aluminum Tubes

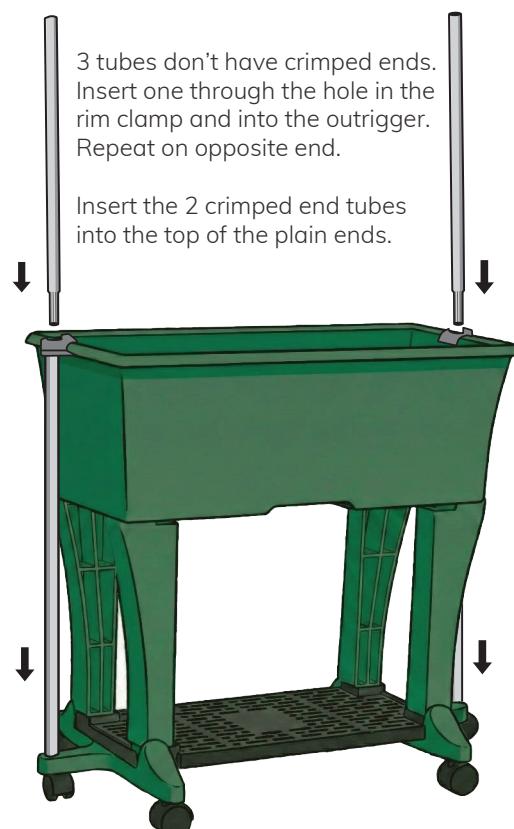

### 7 Assemble and Attach Horizontal Tube



Slide the long sides of the T-connectors into each end of the remaining aluminum tube.



Push the horizontal tube assembly into the top of the aluminum tubes.

### 8 Hang Trellis Net



Hang trellis net over top T-connectors of the Staking System. Tie net to the top bar and down each side of the aluminum tubes at equal intervals.

Trellis net measures 4 squares across by 9 squares down. Any excess netting may be trimmed off with scissors.